






HOBO Pendant Comparison

		Temperature w/ Alarm Logger	Temperature w/ Alarm Logger	Temperature/ Light Logger	Temperature/ Light Logger	Acceleration/ Tilt/Motion
						
		UA-001-08	UA-001-64	UA-002-08	UA-002-64	UA-004-64
Number of Channels		1	1	2	2	3
Internal Sensors	Temperature	yes	yes	yes	yes	--
	Light Intensity	--	--	yes	yes	--
	Acceleration	--	--	--	--	yes
Size	cm	5.8 x 3.3 x 2.3	5.8 x 3.3 x 2.3	5.8 x 3.3 x 2.3	5.8 x 3.3 x 2.3	5.8 x 3.3 x 2.3
	inches	2.3 x 1.3 x 0.9	2.3 x 1.3 x 0.9	2.3 x 1.3 x 0.9	2.3 x 1.3 x 0.9	2.3 x 1.3 x 0.9
Hole in mounting bail	mm	3.2	3.2	3.2	3.2	3.2
	inches	0.13	0.13	0.13	0.13	0.13
Weight	grams	18	18	18	18	18
	ounces	0.6	0.6	0.6	0.6	0.6

Complete system requires logger, software and base station or shuttle.

Ordering Information

Data Loggers

HOBO Pendant Temperature w/Alarm	UA-001-08
HOBO Pendant Temperature w/Alarm	UA-001-64
HOBO Pendant Temperature w/Light	UA-002-08
HOBO Pendant Temperature w/Light	UA-002-64
HOBO Pendant Acceleration/Tilt/Motion	UA-004-64

Software

HOBOWare Pro Software (Windows/Mac)	BHW-PRO-CD
HOBOWare Lite Software (Windows/Mac)	BHW-LITE-CD
Pendant Base Station**	BASE-U-1

Optional Communications and Accessories

HOBO U-Shuttle (requires Base Station)*	U-DT-1
HOBO Waterproof Shuttle with Couplers*	U-DTW-1
Solar Radiation Shield***	RS1

* Requires HOBOWare Pro software. See page 52 for details.

** HOBO Waterproof Shuttle or Optic USB Base Station (BASE-U-4) may be used instead of the Pendant Base Station (BASE-U-1) (See pages 70-71 for details).

*** Accurate temperature measurements in sunlight require a radiation shield.

HOBOWare software is available for download via the web. Visit onsetcomp.com for details.

Supplied in Australia by Instrument Choice
 Call our scientists on 1300 737 871
www.instrumentchoice.com.au