Network **Cable Tracer**

TECHNICIAN



User Manual

Product Diagram



Telephone Wire Search Function







- 1. Directly insert telephone wire with RJ11 plug into the RJ11 socket of the wire tracker's emitter;
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes meaning normal work of emitter;
- 3. Press downward the inching button, use the probe of receiver to find target wire at the other end;
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.

Rapidly find the target wire from among plenty of telephone wires

SE CA



Connect emitter with port of

telephone wire to be found





Find it with receiver at the other end

SE CA





Connect emitter with port of telephone wire to be found

Find it with receiver at the other end

Compare the volume of the "tout" sound and the brightness of the signal indicator. Then you can find the target wire which has the highest volume and brightest indicator.

Network Wire Search Function





 


- 1. Directly insert network wire with RJ45 plug into the RJ45 socket of the wire tracker's emitter;
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes meaning normal work of emitter;
- 3. Press downward the inching button, use the probe of receiver to find target wire at the other end;
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.

Rapidly find the target wire from among plenty of telephone wires

CASE





Connect emitter with port of Find it with receiver at the other end network wire to be found

CASE





Connect emitter with port of network wire to be found

Find it on the switch

Compare the volume of the "tout" sound and the brightness of the signal indicator. Then you can find the target wire which has the highest volume and brightest indicator.

Electric Wire Search Function







- 1. Directly insert telephone wire with crococile clamp and RJ11 plug into the RJ11 socket of the wire tracker's emitter;
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes meaning normal work of emitter:
- Press downward the inching button, use the probe of receiver to find target wire at the other end;
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.

Rapidly find the target wire from cluster of telephone wires

CASE

Note: The equipment is prohibited to be used on heavy-current wires







There is no electric drill required!!!



How to find the wire from among so many wires? It is so slow by using a multimeter.

Compare the volume of the "tout" sound and the brightness of the signal indicator.

Then you can find the target wire which has the highest volume and brightest indicator.

Electric Wire Collation Function



- Insert RJ45 plug at two ends of the network wire into the corresponding sockets at emitter and receiver.
- Push function switchover button on emitter to the position of "TEST", testing indicator "VERIFY" flashes meaning normal work of emitter.
- According to 16 wire sequences, judge the characteristics of short-circuit, breaking circuit, open circuit and crossing.
- During testing, function switchover button can be pressed for switchover of fast and slow levels.

Network Wire Sequence Tester

CASE

Note: The equipment is prohibited to be used on heavy-current wires

Support direct wire collation of operating switch



It's so simple that there is no cable tester required for testing wire now

It can take place of cable tester

It can rapidly test open circuit/short circuit and crossing through the 16 status indicators. The test result is accurate and the result is dispiayed clearly and directly.



Automatic scan mode, rapidly testing, It can test correspondingly double-twisted cables 1,2,3,4,5,6,7,8 and G,meanwile, can judge wrong connection, short circuit and open circuit.

Other Functions

Open circuit or short circuit testing function

Push DIP switch on emitter to position of "TEST", and long press function switchover button on emitter for 2 seconds, "VERIFY" indicator will change "flash" to "lighting" insert the crystal plug with crocodile clamp into RJ11, clamp the two ends to be tested with crocodile clamps, in case of short circuit, "1"-shape indicator of emitter will light up, otherwise it will not light up, resistance of the line can be indicated be brightness of status indicators: the lighter the indicator, the smaller the resistance; the darker the indicator, the bigger the resistance.

DC level testing function

Push DIP switch on emitter to position of "SCAN", and long press function switchover button on emitter for 2 seconds, "STATUS" indicator will turn off and "VERIFY"

indicator flashes, insert the crystal plug with crocodile clamp into RJ11, clamp the two ends to be tested with crocodile clamps, in case that "STATUS" indicator lights up in red, it means the end clamped with red clamp is positive pole, in case that "STATUS" indicator lights up in green, it means the end clamped with red clamp is negative pole, electric level can be judged by brightness of the status indicators; the lighter the indicator, the smaller the resistance; the darker the indicator, the bigger the resistance.



Can test positive and nega tive pole of DC electric level

Low voltage alarm function

Push DIP switch on emitter to position of "SCAN", in case that battery level is lower than 6.0V, "STATUS" and "VERIFY" indicators will light up at the same time, it means battery replacement is needed.

Earphone function

In noisy environment, earphone can be used to prevent interference from the outside.

Volume adjusting function

While find the wire, volume knob can be rotated for moderate level of sound.

Spotlight function

You can easily work as usual while putting on the light switch at night and in the dark.



Energy-saving

Inching switch can automatically delay power-off. The continuous lifespan of battery is over 50 hours.

Specifications

Item	Specification	
Product name	Wire tracker	
Power supply	DC, 9V battery	
The max working current	Emitter	≤10mA
	Receiver	≤30mA
Signal transmission format	Multi-frequency impulse	
Signal output electric status	8Vp-p	
Distance of signal transmission	≥3km	
Appearance dimension	Emitter	126 X 49 X 34,mm
	Receiver	175 X 42 X 27,mm
	Whole set	270 X 165 X 45,mm
Weight	Emitter	0.060kg
	Receiver	0.072kg
	Whole set	0.420kg

Distributed by: Electus Distribution Pty Ltd 46 Eastern Creek Dr, Eastern Creek NSW 2766 Australia Ph 1300 738 555 Int'l +61 2 8832 3200 Fax 1300 738 500

www.electusdistribution.com.au