

## TABLE OF CONTENTS

<u>SECTION</u>	<u>Page</u>
Introduction.....	2
1. Keyboard and Scanner Setup.....	3
2. Parts Counting Function and Scanner.....	4
2.1. Parts Counting Database and Scanner.....	5
3. Check Counting Function and Scanner.....	6
3.1. Check Counting Database and Scanner.....	7
4. Percent Weighing Function and Scanner.....	8
4.1. Percent Weighing Database and Scanner.....	9
5. Check Weighing Function and Scanner.....	10
5.1. Check Weighing Function and Scanner.....	11
6. SQC Process Control Function and Scanner.....	12
6.1. SQC Process Control Database and Scanner.....	13

## 1. Keyboard and Scanner Setup

To connect a barcode scanner and a keyboard simultaneously, please follow the steps below:

 
Before starting, have the following items ready:

- A scale
- A/C adapter
- Barcode scanner
- Scanner Y-cable (long, 3 ends)
- Keyboard
- Keyboard adapter cable (short, 2 ends)


1. Clear the pan, turn off the scale and unplug the power cable.
2. Connect the keyboard's PS/2 connection to the keyboard adapter cable.
3. Connect the keyboard and adapter set to the scanner cable.
4. Connect the RJ-45 scanner cable end to the barcode scanner.
5. Take the PS/2 end of the scanner cable and plug it into the scale.
6. Plug in the power cable to the scale and it should automatically turn on.
7. Once the scale is on, the barcode scanner and the keyboards green LEDs should light up to indicate proper connections were made. If the LEDs do not light up, try reconnecting the cables.

2. Using the scanner with the PARTS COUNTING function:

1. To use the scanner with the parts counting function you must first enable parts counting mode and make sure that sample labeling is turned on.

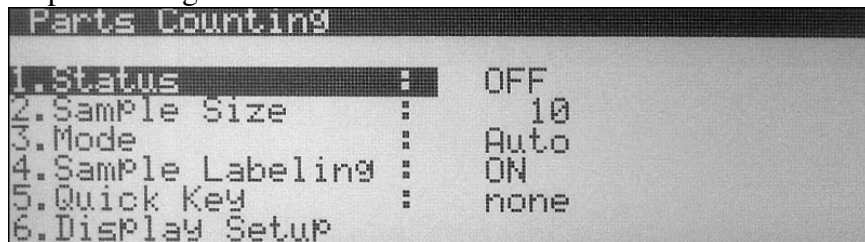

 
2. Start parts counting and press the FUNCTION key to enter into the database.
3. Select an empty slot and pres the RIGHT ARROW key

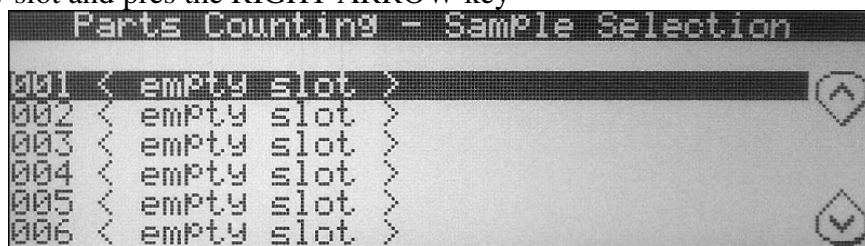

4. Place a container on the pan and press the TARE key.



 - Place a sample in the container and press ENTER to accept the sample and continue.

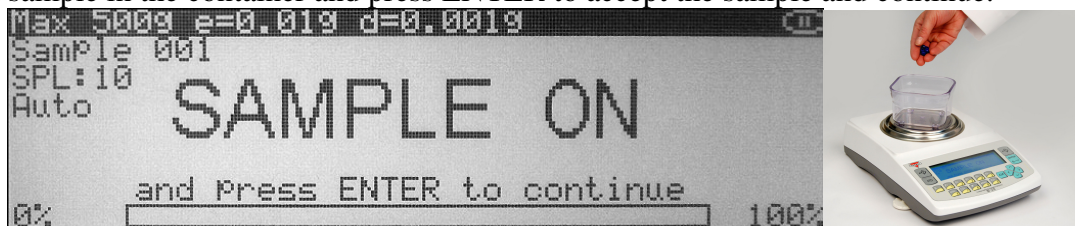

- Instead of typing in the name, scan the barcode associated with that sample. This will briefly display the barcode and save it into the database.
- At this point you can continue using the parts counting function.

### 2.1. Retrieving stored samples with the scanner:

 
- Start parts counting mode and press the FUNCTION key to enter into the database.




- Press F1 to search the database and a cursor should start blinking on the screen.
- Scan the barcode and the location at which this sample is stored will be highlighted.
- Press enter at the highlighted slot and proceed with using the parts counting function.

### 3. Using the scanner with the CHECK COUNTING feature:

1. To use the scanner with the check counting feature you must first enable check counting mode and make sure that limit set labeling is turned on.
2. Start check counting and press the FUNCTION key to enter into the database.
3. Select an empty slot and pres the RIGHT ARROW key.

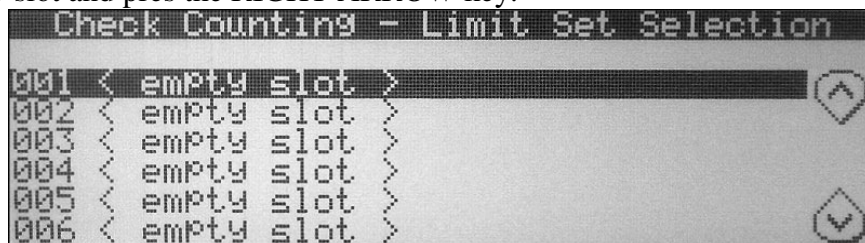

 4. Highlight name and press ENTER.
5. Instead of typing in the name, scan the barcode associated with that sample.
6. Configure your limit set, highlight EXIT/SAVE and press ENTER.

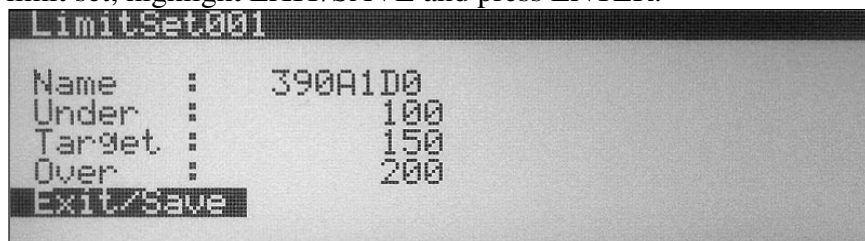

7. Place a container on the pan and press the TARE key.






- Place a sample in the container and press ENTER to accept the sample and continue.



- At this point you can continue using the check counting feature.

### 3.1. Retrieving stored samples with the scanner:

 - Start check counting mode and press the FUNCTION key to enter into the database.

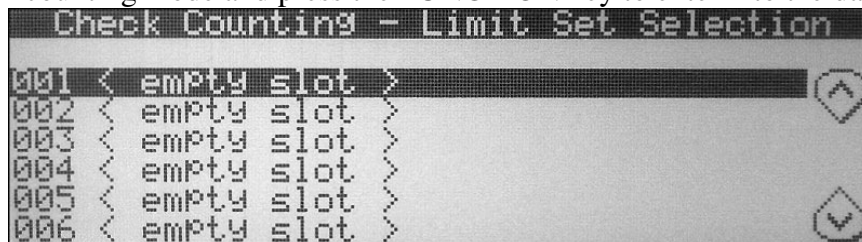

- Press F1 to search the database and a cursor should start blinking on the screen.
- Scan the barcode and the location at which this sample is stored will be highlighted.
- Press enter at the highlighted slot and proceed with using the check counting feature.

#### 4. Using the scanner with the PERCENT WEIGHING function:

1. To use the scanner with the percent weighing function you must first enable percent weighing mode and make sure that reference labeling is turned on.
2. Start percent weighing and press the FUNCTION key to enter into the database.
3. Select an empty slot and press the RIGHT ARROW key.



4. Place a container on the pan and press the TARE key.



5. Place a sample in the container and press ENTER to accept the sample and continue.



6. Instead of typing in the name, scan the barcode associated with that sample. This will briefly display the barcode and save it into the database.

7. At this point you can continue using the percent weighing function.

#### 4.1 Retrieving stored samples with the scanner:

1. Start percent weighing mode and press the FUNCTION key to enter into the database.

 


2. Press F1 to search the database and a cursor should start blinking on the screen.
3. Scan the barcode and the location at which this sample is stored will be highlighted.
4. Press enter at the highlighted slot and proceed with using the percent weighing function.




## 5. Using the scanner with the CHECK WEIGHING function:

1. To use the scanner with the check weighing function you must first enable check weighing mode and make sure that limit set labeling is turned on.
2. Start check weighing and press the FUNCTION key to enter into the database.
3. Select an empty slot and press the RIGHT ARROW key

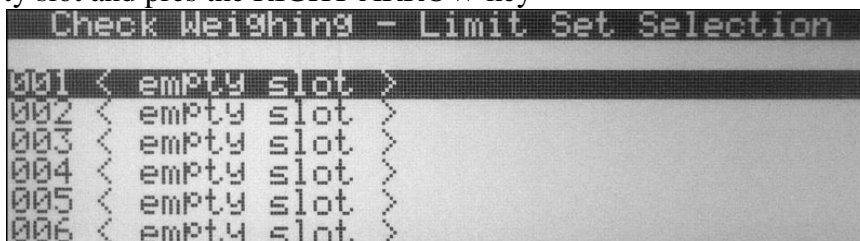

 4. Highlight name and press ENTER.
5. Instead of typing in the name, scan the barcode associated with that sample.
6. Configure your limit set, highlight EXIT/SAVE and press ENTER.

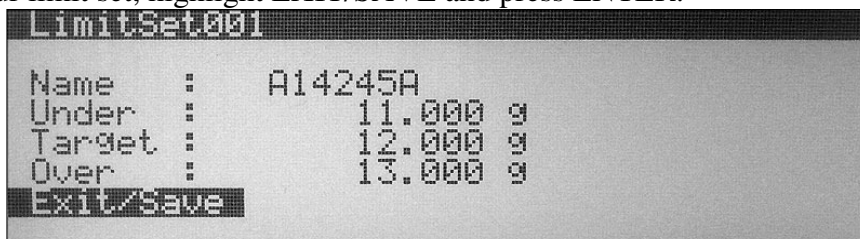

7. Place a container on the pan and press the TARE key.



8. At this point you can continue using the check weighing function.

### 5.1. Retrieving stored limit sets with the scanner:

 
1. Start check weighing mode and press the FUNCTION key to enter into the database.

```
F1-search      ENTER-select  >-edit
001 H14245H    11.000/12.000/13.000 g
002 < empty slot >
003 < empty slot >
004 < empty slot >
005 < empty slot >
006 < empty slot >
```


2. Press F1 to search the database and a cursor should start blinking on the screen.
3. Scan the barcode and the location at which the limit set is stored will be highlighted.
4. Press enter at the highlighted slot and proceed with using the check weighing function.

## 6. Using the scanner with the SQC Process Control function:

1. To use the scanner with the SQC Process Control function you must first enable SQC Process Control mode and make sure that limit set labeling is turned on.
2. Start SQC Process Control and press the FUNCTION key to enter into the database.
3. Select an empty slot and press the RIGHT ARROW key

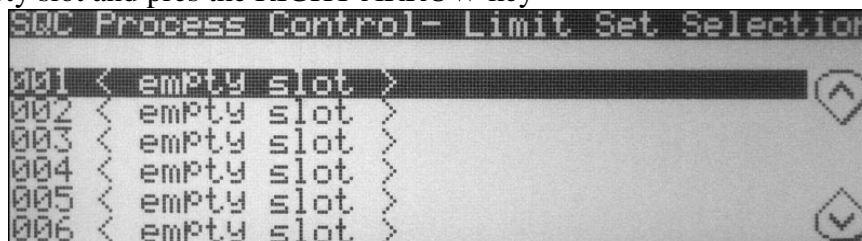

 4. Highlight name and press ENTER.
5. Instead of typing in the name, scan the barcode associated with that sample.
6. Configure your limit set, highlight EXIT/SAVE and press ENTER.

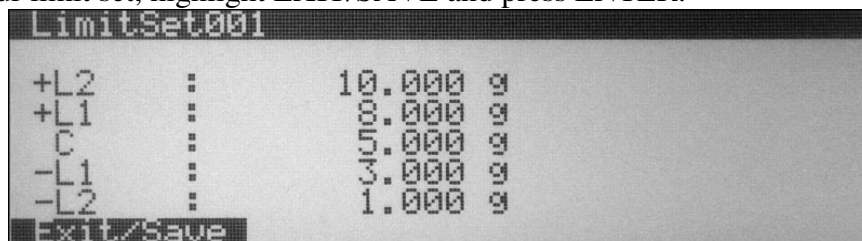

7. Place a container on the pan and press the TARE key.



8. At this point you can continue using the SQC Process Control function.

## 6.1. Retrieving stored limit sets with the scanner:

1. Start SQC Process Control mode and press the FUNCTION key to enter into the database.



2. Press F1 to search the database and a cursor should start blinking on the screen.
3. Scan the barcode and the location at which the limit set is stored will be highlighted.
4. Press enter at the highlighted slot and proceed with using the SQC Process Control function.