

## CENTER 337 Lightmeter

Our light meter CENTER 337 can be used in working environmental check, illumination design verification and other light monitoring applications. If the user turns on this unit with the cap on, it will zero the reading automatically. With the sensor on the top of tester, this meter can easily operate with single hand. The sensor is compensated with filter to make the response close to human eye. The light source angle is also compensated according to its cosine function.

### FEATURES:

- 5 Digital Display
- Auto Ranging
- Automatic Power Off
- Fc / lx Function Selectable
- HOLD Function
- Range Display
- Automatic Zero When Power On

### SPECIFICATIONS

Light Range	0.000 ~ 4000 fc 0.00 ~ 40000 lx
Sample Rate	2 times/sec
Auto Power Off	30 minutes
Battery	9V battery
Dimensions	196x54x34 mm
Weight	Approx. 180g

### STANDARD ACCESSORIES


Operation manual, Battery, Carry case.




- Use CENTER 337 Lightmeter to monitor the illumination of working environment. This will ensure the comfortable and healthy working condition.



- RANGE DISPLAY:

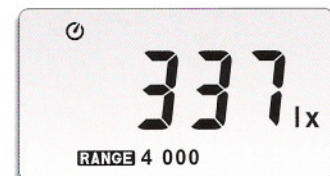

- CALIBRATION DISPLAY:

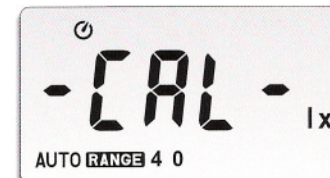

Supplied in Australia by Instrument Choice  
Call our scientists on 1300 737 871  
[www.instrumentchoice.com.au](http://www.instrumentchoice.com.au)