


HOBO UX120 4-Channel Analog Logger

Flexible, Accurate, 4-channel Analog Logger

The HOBO UX120-006M Analog Logger is a high-performance, LCD display data logger for building performance monitoring applications.

As Onset's highest-accuracy data logger, it provides twice the accuracy of previous models, a deployment-friendly LCD, and flexible support up to four external sensors for measuring temperature, current, CO₂, voltage and more.

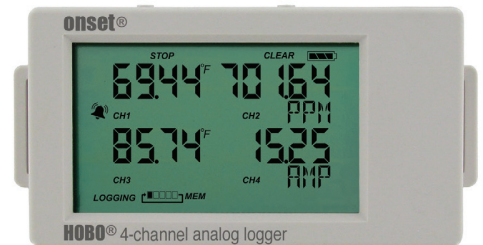

Supported Measurements: Temperature, 4-20mA, AC Current, AC Voltage, Air Velocity, Carbon Dioxide, Compressed Air Flow, DC Current, DC Voltage, Gauge Pressure, Kilowatts, Volatile Organic Compound (sensors sold separately)

Key Advantages:

- Twice the accuracy over previous models
- 16-bit resolution
- Flexible support for a wide range of external sensors
- LCD confirms logger operation and displays near real-time measurement data
- Provides minimum, maximum, average and standard deviation logging options
- On-screen alarms notify you when a sensor reading exceeds set thresholds
- Stores 1.9 million measurements for longer deployments between offloads

Minimum System Requirements:



Software



USB cable*

Supplied by:

Instrument Choice

Phone: 1300 737 871

Fax: 1300 882 503

Email: customer-service@instrumentchoice.com.au

www.instrumentchoice.com.au

*USB cable included with software

► For complete information and accessories, please visit: www.onetemp.com.au

Part number	UX120-006M (4-Channel Analog)
Memory	1.9 Million
Logging Rate	1 second to 18 hours, user selectable
Logging Modes	Normal, Burst, Statistics
Memory Modes	Wrap when full or stop when full
Time Accuracy	±1 minute per month at 25°C (77°F)
Battery Life	1 year typical with logging rate of 1 minute and sampling interval of 15 seconds or greater, user replaceable, 2 AAA
Dimensions	10.8 x 5.41 x 2.54 cm (4.25 x 2.13 x 1 in.)
Operating Range	Logging: -20° to 70°C (-4° to 158°F); 0 to 95% RH (non-condensing)
Accuracy	±0.1 mV ±0.1% of reading
CE Compliant	Yes

 **instrument choice.com.au**[™]
The support of a scientist with every product.

Phone: 1300 737 871

Fax: 1300 882 503

Email: customer-service@instrumentchoice.com.au

www.instrumentchoice.com.au