

## CENTER 320 Sound Level Meter

Our standard sound level meter CENTER 320 has a wide dynamic range from 30 to 130 dB. It has different frequency weighting A and C to respond to human sense or machine monitoring purposes. For different sound pattern, it also supplies Fast and Slow time constant setting. Analog output is also provided for other use.



### FEATURES:


- 4 Digits Display
- MAX/MIN Function
- Level Range Display
- Resolution 0.1dB
- AC/DC Signal Output
- IEC 651 TYPE II

### SPECIFICATIONS

Level Range	Lo = 30 ~ 80dB; Med = 50 ~ 100dB; Hi = 80 ~ 130dB
Accuracy	± 1.5dB (ref 94dB@1KHz)
Frequency Weighting	A / C
Time Weighting	Fast, Slow
Dynamic Range	50dB
Frequency Range	31.5Hz to 8KHz
Microphone	Electret condenser microphone
Auxiliary Outputs	AC/DC Output
Battery	9V battery
Dimensions	275x64x30 mm
Weight	Approx. 280g

### STANDARD ACCESSORIES

Battery, Operation Manual, Carrying Case, Calibration Screwdriver, Windscreen, 3.5 φ plug.

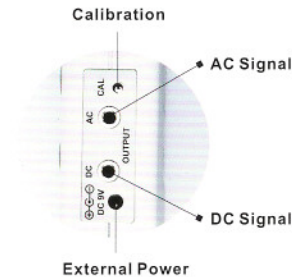

Supplied in Australia by Instrument Choice  
 Call our scientists on 1300 737 871  
[www.instrumentchoice.com.au](http://www.instrumentchoice.com.au)