APPLICATION

"bun HYGRO" is a temperature and relative humidity (RH) recorder and alarm system. It is powered by 2 replaceable AA batteries for up to 10 years and connects directly to Wi-Fi.

More than an accurate meter and a reliable logger, "bun HYGRO" is also a cloud-based alarm system.

All setting parameters like measurement intervals, upload intervals, minimum and maximum allowed temperature and humidity thresholds can be set through a web-based application on any platform. It sends out email and text message alarms as soon as any parameter goes wrong. It provides access to the records history, graphs and periodical reports on any platform. Its hardware and software installation is very easy and does not require any special tools or applications.



GENERAL SPECIFICATIONSBuilt in sensorsTemperature – Relative humidity (RH)Temperature measurement range°C-25 to +70

Temperature measurement range	°C	-25 to +70
	°F	-13 to +160
Upload temperature range*	°C	-5 to +70
	°F	20 to +160
Temperature measurement accuracy	°C	± 0.3 (down to ± 0.2 by order) (± 0.55 °F)
RH measurement range	%	0 to 100 (non-condensing)
RH measurement accuracy	%	± 3% (max.) (down to ± 1.8 % by order)
Power supply		2 x AA replaceable battery
Protection class		IP 54
Compliances		IEEE 802.3, EN 61326-1, EN 61010, EN 12830,
		FCCID: 2AHMR-ESP12F, CE, ROHS, HACCP
Battery life*		Up to 10 years
Upload intervals		One hour to once a week (or on demand)
Record intervals		1 minute to 120 minutes (down 2 sec. by order)
Interface		Wi-Fi - IEEE 802.3 – 2.4 GHz
Max. number of internal records		16,384 – Automatic cloud sync and replace

*Upload temperature range is the ambient condition required for the device to stay fully operational. These operations include being able to connect and sync with the cloud and send out alarms. However, the device can continue recording the data in its internal memory while in temperature measurement range.




*Depends on reading and upload intervals and environmental conditions. Battery life is more than 10 years in a standard set up. (Standard set up is room temperature 20°C measurement every 15 minutes upload every 48 hours).


AMBIENT CONDITIONS

Storage temperature	°C	-25 to +75

DIMENSIONS		
Diameter (max.)	L	mm 80.0
Height (max.)	Н	mm 34.5

Maximum and typical inaccuracy

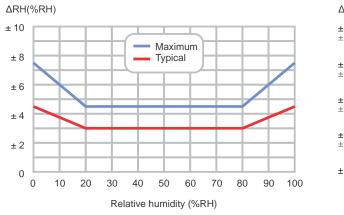

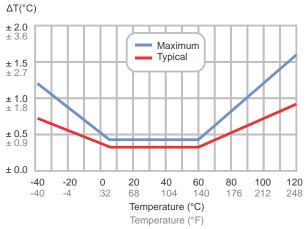

Loggerflex smart devices Ltd. 2-3304, Cambie St. Vancouver, BC V5Z 2W5 Canada

info@Loggerflex.com www.loggerflex.com

Tel.: (604) 210 22 42 Toll free: +1 888 365 88 80





HYGRO - 2020-01-02-EN