

# RTDTemp101A RTD-Based Temperature Data Logger


Don't be fooled by the small size, the RTDTemp101A temperature data logger offers a wealth of features with a compact form factor about the size of a matchbox. When used with an external RTD probe, this data logger measures temperatures from -200 °C to 850 °C (-328 °F to +1562 °F).

The low power design of this data logger provides a battery life of up to 10 years but still delivers ultra-fast download speeds. The RTDTemp101A can store over a million readings and offers a software configurable memory wrap option. In addition to having a pushbutton start stop, the device also can be programmed to a delay start up to 18 months in advance.

Using the MadgeTech Data Logger Software, data from the RTDTemp101A is easily downloaded, displayed and formatted for reports or the data can be exported to Excel for further presentation customization.

This versatile device can be used for a wide variety of applications such as calibration chamber monitoring, HVAC applications, environmental studies or precision temperature recording for medical and pharmaceutical applications.

## MadgeTech 4 Software Features

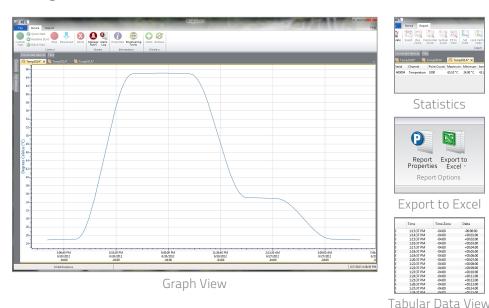

Multiple graph overlay

- Statistics
- Digital calibration
- Zoom in/ zoom out
- Lethality equations (F0, PU)
- Mean Kinetic Temperature
- Full time zone support
- Data annotation
- Min./Max./Average lines
- Summary view



#### Features

- 10 Year Battery Life
- ±0.04 °C Accuracy
- Multiple Start/Stop Function
- Ultra High Speed Download
- 1,396,736 Reading Storage Capacity
- Memory Wrap
- Precision RTD Sensing Element
- Battery Life Indicator
- Optional Password Protection
- Programmable High and Low Alarms
- Field Upgradeable

#### Benefits

- Simple Setup and Installation
- Minimal Long-Term Maintenance
- Long-Term Field Deployment

### Applications

- Calibration Chamber Monitoring
- HVAC
- Medical/Pharmaceutical
- Environmental Studies
- Precision Temperature Recording

	Αı	ut	0	m	a	ti	0	n	
--	----	----	---	---	---	----	---	---	--

# SPECIFICATIONS

Specifications are subject to change without notice. Specific warranty remedy limitations apply. Call (603) 456-2011 or go to madgetech.com for details.

TEMPERATURE				
Temperature Sensor*	External 100 $\Omega$ RTD (Sold Separately)			
Temperature Range	18 Ω to 400 Ω -200 °C to +850 °C (-328 °F to +1562 °F) (Probe Dependent)			
Temperature Resolution	0.0005 Ω 0.01 °C (0.018 °F) (Probe Dependent)			
Calibrated Accuracy**	±0.015 Ω ±0.04 °C (±0.072 °F) <i>(Probe Dependent)</i>			
Input Connection***	Removable screw terminal; 2, 3 or 4 wire interface			
Temperature Effect on Span	< 2 ppm / °C			
Temperature Effect on Offset	< 10 ppm cumulative over entire range			

\*Temperature specifications based on ideal 100  $\Omega$  Pt RTD compliant with IEC 751 (1983) and ITS-90, 5000  $\Omega$  FSR (accuracy based on 36 in lead wire RTD with 4 wire configuration)

\*\*Calibrated accuracies based on standard MadgeTech calibrations for 0 to 200  $\Omega$  range.

\*\*\*100  $\Omega$ , 2 or 4 wire RTD probes are recommended for the most accurate performance. Most 100  $\Omega$ , 3 wire RTD probes will work, but MadgeTech cannot guarantee the accuracy. To determine whether or not the 3-wire RTD probe will work, the resistance between the two same colored wires should be less than 1  $\Omega$ . (*Note: Please contact the manufacturer of the RTD probe for questions on the resistance.*)

GENERAL			
Start Modes	Immediate start Delay start up to 18 months Multiple pushbutton start/stop		
Stop Modes	Manual through software Timed (specific date and time)		
Multiple Start/Stop Mode	Start and stop the device multiple times without having to download data or communicate with a PC		
Real Time Recording	May be used with PC to monitor and record data in real time		
Password Protection	An optional password may be programmed into the device to restrict access to configuration options. Data may be read out without the password.		
Memory	1,396,736 readings; software configurable memory wrap 598,601 readings in multiple start/stop mode		
Wrap Around	Yes		
Reading Rate	1 reading every second up to 1 reading every 24 hours		
Alarm	Programmable high and low limits; alarm is activated when temperature reaches or exceeds set limits		
LEDs	2 status LEDs		
Calibration	Digital calibration through software		
Calibration Date	on Date Automatically recorded within device		
Battery Type	3.6 V lithium battery included; user replaceable		
Battery Life	10 years typical at a 15 minute reading rate		
Data Format	Date and time stamped °C, K, °F or °R		
Time Accuracy	±1 minute/month at 26 °C (77 °F) (Stand alone mode)		
Computer Interface	USB (interface cable required); 115,200 baud		
Operating System Compatibility	Windows XP SP3 or later		
Software Compatibility	Standard Software version 2.03.06 or later Secure Software version 4.1.3.0 or later		
Operating Environment	-40 °C to +80 °C (-40 °F to +176 °F) 0 %RH to 95 %RH non-condensing		
Dimensions	1.4 in x 2.1 in x 0.6 in (35 mm x 54 mm x 15 mm)		
	0.9  or (24  s)		
Weight	0.8 oz (24 g)		
Weight Material	Polycarbonate		

BATTERY WARNING: FIRE, EXPLOSION AND SEVERE BURN HAZARD. DO NOT RECHARGE, DISASSEMBLE, HEAT ABOVE 100 °C (212 °F), INCINERATE, CRUSH, OR EXPOSE CONTENTS TO WATER.

#### Ordering Information

RTDTemp101A	PN 901520-00	RTD-Based Temperature Data Logger	
IFC200	PN 900298-00	USB interface cable	
LTC-7PN	PN 900352-00	Replacement battery for the RTDTemp101A	

For Quantity Discounts call (603) 456-2011 or email sales@madgetech.com

