PosiTest[®] Accurate & Dependable

For the non-destructive measurement of non-magnetic coatings (paint, enamel, galvanizing, metalizing, plating, etc.) on STEEL







Stable design with additional tail-end support. No annoying rocking during measurement.



PosiTest® Accurate & Dependable

For the non-destructive measurement of non-magnetic coatings (paint, enamel, galvanizing, metalizing, plating, etc.) on STEEL

ACCURATE

- Certificate of Calibration showing traceability to NIST included with every gage
- Matching Calibration Standards and Procedures available for every model
- Highly wear resistant Carbide Probe for longest life and continuous accuracy
- Removable center of dial cover for easy calibration adjustment
- Conforms to national and international standards

DURABLE


- Extra rugged housing, not affected by mechanical shock, water, acid or solvents
- Unique overall design, fully supported, positive positioning, no pivoting tendencies during measurement
- Can be used fully supported or with only the front probe area contacting the surface
- Functions on a permanent rare-earth cobalt magnet
- No batteries/electronics
- 2 year warranty


EASY TO USE

- Positive visual and audible indicators to designate when thickness reading is established
- "V" grooves in probe housing and Gage base allow correct positioning on cylindrical objects
- Compact, lightweight, precisely balanced, independent of gravity can be used in any position
- GO/NO-GO button can be pre-set for rapid measurement
- Probe contact and dial rotation all in a one-finger operation
- Furnished with wrist strap and instructions in a high quality leather case with belt loops for your convenience



Carbide measuring probe for long life.

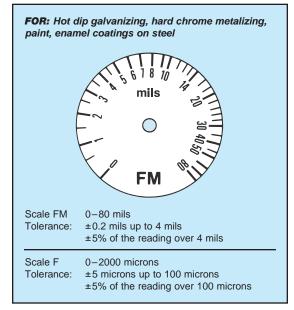

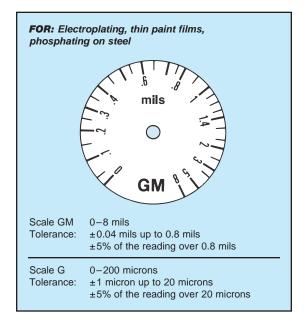

PT.FM-GM.v.LW-W1608

In support of our policy of continuous product improvement we reserve the right to change materials and specifications without notice. Drawings, where used, are not to scale. All dimensions are in millimetres and sizes given are approximate. Where possible, technical MSDS data sheets are made available on the website. All products should be installed and used in accordance with manufacturer's instructions provided. Warning: products may be the subject of registered designs and patents. Refer to website for terms and conditions on warranty.

