

Changing the Transmitter ID on the Davis Vantage Vue Weather Station

1. YOU WILL NEED;

- a. The Outdoor Sensor Suite
- b. The Indoor Console

Note: When changing the transmitter ID you must remember to change it on both the outdoor sensor suite and indoor console.



2. CHECK

To check the current ID press and release the transmitter ID button quickly.

The LED will blink once. Then, after a short pause, it will blink any number of times between 1-8. The number of blinks corresponds with the transmitter ID channel.

3. ENTER SETUP MODE

To change, push and hold the transmitter ID button until the LED light begins to flash quickly. This flashing indicates the device is in setup mode.

Release the button, and the LED will go dark.



4. TO CHANGE

Push the button the number of times equal to your desired new transmitter ID.

5. CONFIRMATION

Wait until four seconds has elapsed with no further button pressing, the LED will blink the same number of times as the new transmitter ID.

The outdoor sensor suite ID is now updated.


Tip: If you're unsure, you can press and release the transmitter button as you did with the first step. A light will blink then the transmitter ID will flash.

Now move on to changing the Indoor Console.



6. ENTER SETUP MODE

To change the indoor console you need to enter setup mode. To do so, press the '2nd' then setup buttons.

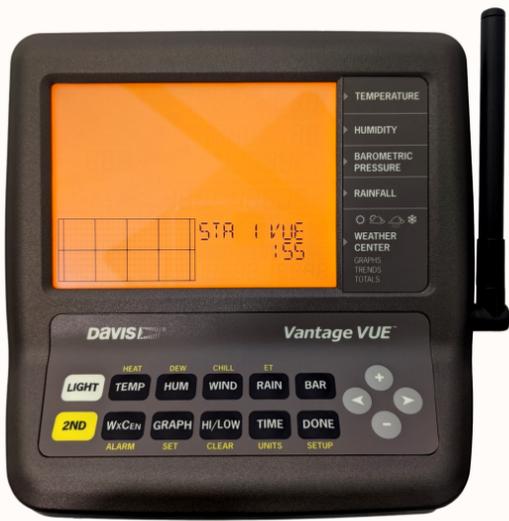

7. TRANSMITTER ID SCREEN


Press the done button several times until you land on the STA (Current ID Number) VUE ISS Screen.

8. TURN NEW ID ON AND OLD ID OFF

Press the + or - button to turn the reception of signals from the channel on or off.

Press < or > to move between transmitter IDs

On this screen turn off STA 1 VUE ISS and turn on STA 4 VUE ISS to match the updated outdoor sensor suite transmitter ID.

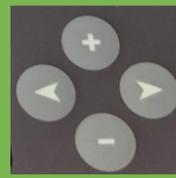

9. RETURN TO THE MAIN SCREEN

Once the ID you wish to use is on and the other IDs are off, return to the main screen by pressing and holding 'DONE'

10. WAIT

Give the outdoor sensor suite some time to sync up with the indoor console.

Once outdoor weather data is being received the change over is complete.



Need a hand with changing the transmitter ID or have some questions?

Speak with one of our helpful Scientists!

Call us on 1300 737 871

or

Email customer-service@instrumentchoice.com.au